


Brady Sprinkler Trim Ring Model # BSTR-500 (5") & Model # BSTR-600 (6")

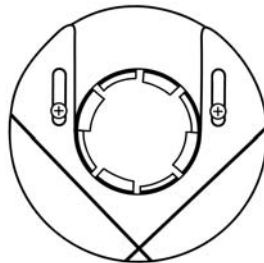

Sprinkler Trim Ring Installation Instructions

Step 1

Begin by preparing the area around sprinkler head. (Figure 1)

- 1. Measure the diameter of the sprinkler head and select the appropriate size trim ring.**
- 2. Remove grass and dirt consistent with outside diameter of trim ring to approximately 1/4" below the head of sprinkler.**

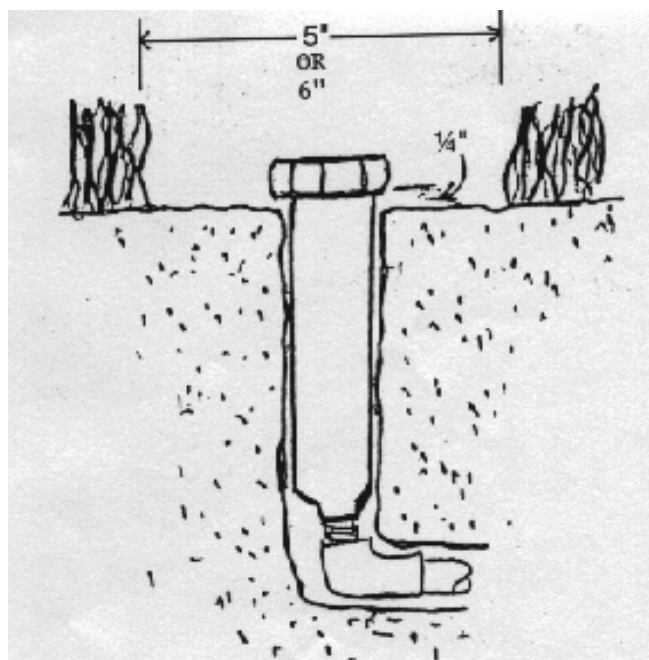


Figure 1

Step 2

Prepare the trim ring. (Figure 2)

Three (3) basic inside diameters are available on each trim ring. Depending on the outside diameter of your sprinkler head, you may choose one of the following options:

- a.) Leave all the removable tabs intact.
- b.) Remove just the longest tabs.
- c.) Remove all tabs.

1. Size the inner diameter of the trim ring to closely match the diameter of the sprinkler head body by snapping off tabs. (Use pliers if required) Scoring the grooves with a utility knife before snapping may make this easier and have cleaner breaks.

2. For edge mounting against driveways, sidewalks, patios, etc. “score” one linear indent with utility knife and snap off removable arc against the edge of a table or bench.

3. For corner installation remove both arcs in the manner described above.

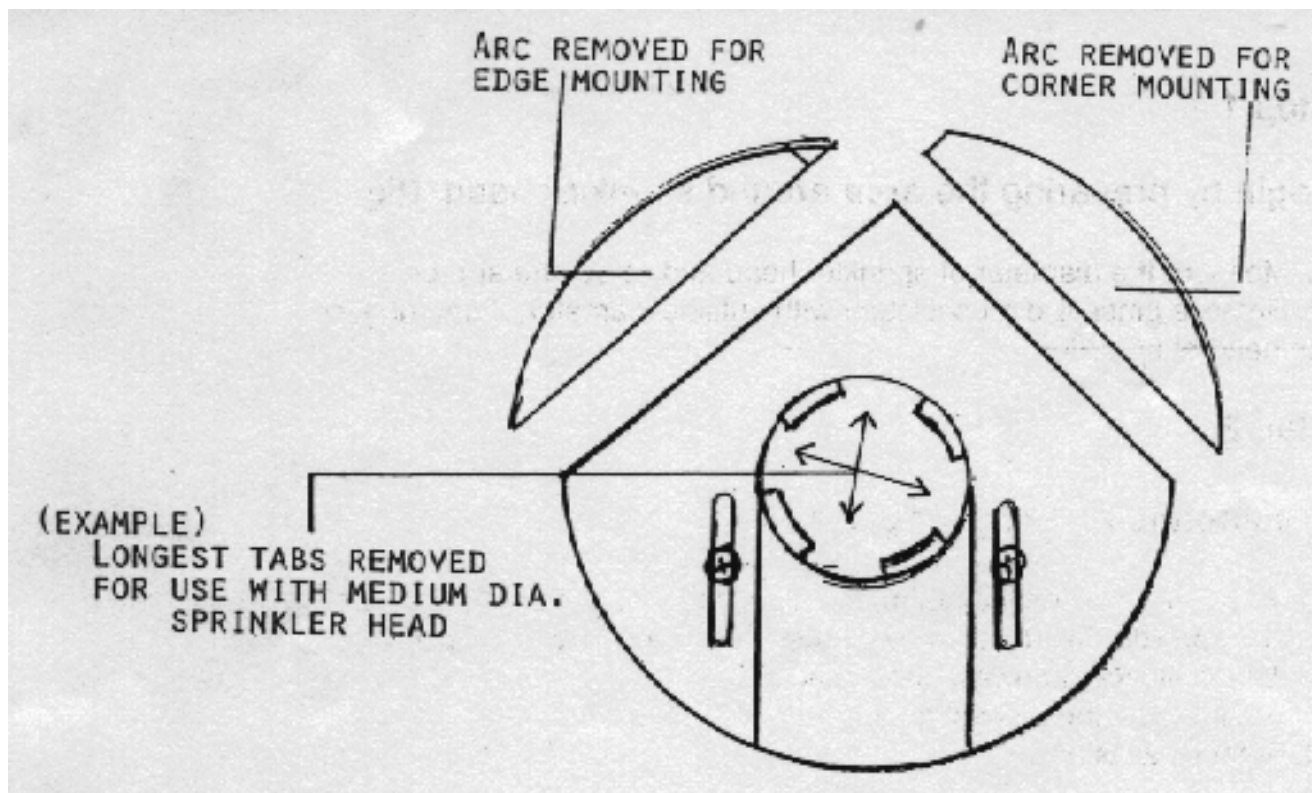


Figure 2

Step 3

Install the Sprinkler Trim Ring to sprinkler head. (Figure 3)

- 1. Remove one (1) Phillips head screw and loosen the other screw.**
- 2. Turn the crescent plate to allow access to inner diameter of the trim ring.**
- 3. Place the trim ring around sprinkler head at ground level, just below largest area of head of sprinkler.**
- 4. Reposition the two (2) sections of trim ring so that slots align with screw holes and reinstall screw. Push sections together to capture head and tighten screws – using care not to not overtighten ! (this could damage threads).**
- 5. Installation is now complete and should be repeated for each additional sprinkler trim ring to be installed.**

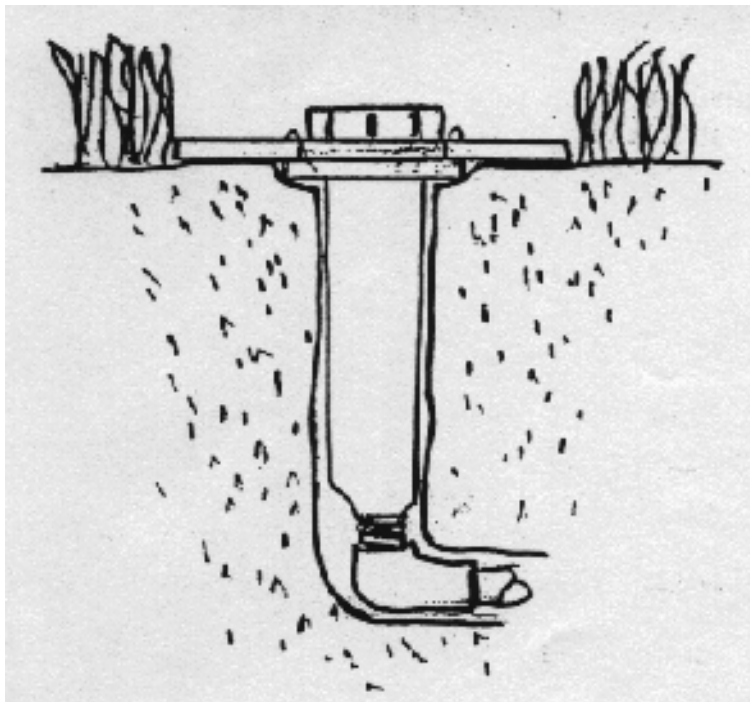


Figure 3